

YUGEN

GUEST AND COMMUNITY CHAIRS

Design: Paolo Scagnellato & Jeremiah Ferrarese Design



Yugen is a multipurpose seating program designed to furnish community spaces, from airport lounge areas to auditoriums. The secret of this transversality are its many configurations, including the version up to four-seater bench, thanks to options such as writing tablet, armrests, castors and connecting accessories. The contrast between the wraparound backrest and strict lines and the wide range of finishes for plastics and metal structures render Yugen a chair with a strong identity, whatever the configuration chosen.

Technical features

Seat and Backrest	Polypropylene. PP version available in: black, white, grey, coral. Version with padded seat available in: black, white
Frame	4-legged steel \varnothing 25 x 1,5 mm, chrome or painted in black, white, grey, coral
Padding	Flexible polyurethane foam 1,5 cm thick, density 40 rc
Armrests	Polypropylene or polished aluminum or black aluminum
Tablet	Polypropylene, anti-panic
Beam	Rectangular steel tube 80x40x1,5 black painted
Bench legs	Black nylon
Swivel base	Black or white 4-spikes pyramide base on items 212-213

Components and/or modules






Image	Dimensions		Code	Description
	H	78	N200V	Polypropylene stack chair, seat & backrest color: Black, White, Grey, Coral black painted 4-legged base
	L	57	B200V	white painted 4-legged base
			G200V	grey painted 4-legged base
	P	55	OR200V	coral painted 4-legged base
			C200V	chrome 4-legged base
	H	78	N201VNR	Stack chair, black polypropylene backrest, padded seat black painted 4-legged base
	L	57	B201VNR	white painted 4-legged base
			G201VNR	grey painted 4-legged base
	P	55	OR201VNR	coral painted 4-legged base
			C201VNR	chrome 4-legged base
	H	78	N201VBN	Stack chair, white polypropylene backrest, padded seat black painted 4-legged base
	L	57	B201VBN	white painted 4-legged base
			G201VBN	grey painted 4-legged base
	P	55	OR201VBN	coral painted 4-legged base
			C201VBN	chrome 4-legged base
	H	78	BRN200	Pair of black polypropylene armrests
	L	57	BRB200	Pair of white polypropylene armrests
			BROR200	Pair of coral polypropylene armrests
	P	55	BRG200	Pair of grey polypropylene armrests
			BRN201DX	Right-handed black aluminum armrest with rotating pad











Image	Dimensions		Code	Description
			BRN202SX	Left-handed black aluminum armrest with rotating pad
			BRN203TADX	Right-handed black aluminum armrest with anti-panic tablet
			BRN204TASX	Left-handed black aluminum armrest with anti-panic tablet
			BRC201DX	Right-handed polished aluminum armrest with rotating pad
			BRC202SX	Left-handed polished aluminum armrest with rotating pad
			BRC203TADX	Right-handed polished aluminum armrest with anti panic tablet
			BRC204TASX	Left-handed polished aluminum armrest with anti panic tablet
			AG-N205	Black metal linking clip for armrests / tablets
	H	78	N210T2	Two-seater bench, polypropylene seat and back
	L	129		
	P	56		
	H	78	N210T2+T	Two-seater bench with black laminate in-built table, polypropylene seat and back
	L	187		
	P	56		








Image	Dimensions		Code	Description
	H	78	N210T3	Three-seater bench, polypropylene seat and back
	L	187		
	P	56		
	H	78	N210T3+T	Three-seater bench with black laminate inbuilt table, polypropylene seat and back
	L	231		
	P	56		
	H	78	N210T4	Four seater bench, polypropylene seat and back
	L	231		
	P	56		
	H	78	N211T2NR	Two-seater bench, padded seat, black polypropylene back
	L	129		
	P	57		
	H	78	N211T2+TNR	Two-seater bench with black laminate in-built table, padded seat, black polypropylene back
	L	187		
	P	57		
	H	78	N211T3NR	Three-seater bench, padded seat, black polypropylene back
	L	187		
	P	57		
	H	78	N211T3+TNR	Three-seater bench with black laminate in-built table, padded seat, black polypropylene back
	L	231		
	P	57		



























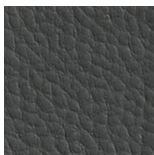



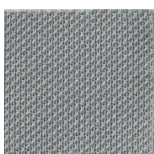











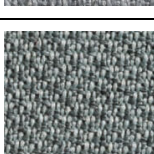






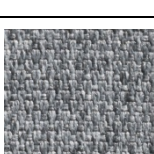




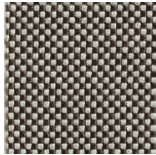














Image	Dimensions		Code	Description
	H	78	N211T4NR	Four-seater bench, padded seat, black polypropylene back
	L	231		
	P	57		
	H	78	N211T2BN	Two-seater bench, padded seat, white polypropylene back
	L	129		
	P	57		
	H	78	N211T2+TBN	Two-seater bench with black laminate in-built table, padded seat, white polypropylene back
	L	187		
	P	57		
	H	78	N211T3BN	Three-seater bench, padded seat, white polypropylene back
	L	187		
	P	57		
	H	78	N211T3+TBN	Three-seater bench with black laminate in-built table, padded seat, white polypropylene back
	L	231		
	P	57		
	H	78	N211T4BN	Four-seater bench, padded seat, white polypropylene back
	L	231		
	P	57		
	H	79	N212B	Black polypropylene swivel chair, black nylon 4-spikes pyramide base on castors
	L	50		
	P	67		

Image	Dimensions		Code	Description
	H	79	N213BNR	Swivel chair, padded seat, black polypropylene back, black nylon 4-spikes pyramide base on castors
	L	50		
	P	67		
	H	79	B212B	White polypropylene swivel chair, white nylon 4-spikes pyramide base on castors
	L	50		
	P	67		
	H	79	B213BBN	Swivel chair, padded seat, white polypropylene back, white nylon 4-spikes pyramide base on castors
	L	50		
	P	67		

Materials and finishings

Cat.	Material	Description	Certifications	Link
1	 Madrid 13 colors	Weight: ± 230 g/mq Composition: 100% PP polypropylene F.R. Martindale: 80.000 cycles	  Fire proof class 1IM	
1	 Cove 13 colors	Weight: ± 565 g/mq Composition: 82% PVC – 7% Cotton – 11% Polyester Martindale: 50.000 cycles		
2	 Angel 13 colors	Weight: ± 228 g/mq Composition: 100% polypropylene F.R. Martindale: 100.000 cycles	 Fire proof class 1IM	
2	 One 15 colors	Weight: ± 350 g/mq Composition: 100% recycled polyester Martindale: 100.000 cycles	   Fire proof class 1IM	
2	 Gazebo 15 colors	Weight: ± 640 g/mq Composition: 87,5% Plasticized polyvinylchloride – 12,5% Cotton Martindale: 50.000 cycles	 Fire proof class 1IM	
2	 King-flex 15 colors	Weight: ± 300 g/mq Composition: 100% Polyester Trevira CS Martindale: 100.000 cycles	    Fire proof class 1IM	
3	 Secret 15 colors	Weight: ± 540 g/mq Composition: 76% PVC – 2% PU – 22% PES Martindale: 60.000 cycles Features: waterproof, UV rays resistant, suitable for outdoor	 Fire proof class 1IM	
3	 Mini 15 colors	Weight: ± 340 g/mq Composition: 100% Polyester Trevira CS Martindale: 100.000 cycles	    Fire proof class 1IM	
3	 Sealife 15 colors	Weight: ± 330 g/mq Composition: 100% Recycled polyester SEAQUAL certified Martindale: 100.000 cycles	    Fire proof class 1IM	

Cat.	Material	Description	Certifications	Link
5	 Step 15 colors	Weight: ± 340 g/mq Composition: 100% Trevira CS Martindale: 100.000 cycles	    Fire proof class 1IM	
5	 Go Check 15 colors	Weight: ± 310 g/mq Composition: 100% Trevira CS Martindale: 200.000 cycles Features: antibacterial, hypoallergenic, non-toxic	     Fire proof class 1IM	
5	 Lana 13 colors	Weight: ± 410 g/mq Composition: pure new wool Martindale: 50.000 cycles Features: 100% recyclable fabric	  Fire proof class 1IM	
5	 Extrema 15 colors	Weight: ± 480 g/mq Composition: 63% PU - 29% COT - 8% PES Martindale: 150.000 cycles Features: antibacterial protection	  Fire proof class 1IM	

Certifications



Class 1IM (upholstered version) or Classe1 (PP version) fire homologation available upon request. FSC® certificate finder.



<https://www.sitlosophy.com/en/seat/yugen/>



<https://www.sitlosophy.com/en/seat/yugen-2/>

INSTRUCTIONS FOR USE AND MAINTENANCE

GENERAL INFORMATION

If the chair is used as a computer station, the angles between foot and calf, calf and thigh, thigh and back, forearm and shoulder must be approximately 90°

GAS PUMP FOR HEIGHT-ADJUSTMENT

Instructions for use: The height adjustment of the seat with a gas pump is obtained by pulling the mechanism lever upwards.

Maintenance instructions: The pump does not require particular maintenance but it is advisable to avoid direct contact with the sliding parts as they contain lubricant.

Warnings: Do not open the gas column by force. Only specialized personnel can replace or repair the gas column.

MECHANISMS

Instructions for use: All anti-shock mechanisms have a safety system which, once unlocked, is activated with a slight backward movement of the backrest, to avoid the sudden and accidental return forward.

Maintenance instructions: It is recommended to periodically clean the mechanism to prevent dust or other indoor pollutants from compromising its operation or causing squeaks.

Warnings: All the adjustments of the mechanisms (height, side shift, seat and backrest adjustment, oscillation) must be operated while seated to avoid putting the mechanism under improper strain. During the adjustment phases, pay attention to avoid any risk of fingers trapping or crushing.

UPHOLSTERIES

Maintenance instructions:

Synthetic leather: Clean with a damp cloth, neutral soap and rinse well with water. Strictly avoid using solvents, bleaches or other chemical detergents, as they could alter the aesthetic and physical characteristics of the product. In general, materials with light colors cannot be put in contact with clothes containing unfixed dyes (eg denim jeans and derivatives) to avoid stains or halos that are difficult to remove.

Fabric: Clean using a damp sponge by moistening the fabric without getting it wet. The use of a suction brush is not recommended, as traces of shampooing may remain on the upholstery, which would modify the fire characteristics of the fabric. Gently dab the edges in the center of the stain, do not rub. After stain removal it is necessary to proceed with a complete drying of the fabric, avoiding subjecting it to high temperatures. Strictly avoid

the use of solvents, bleaches or other chemical detergents, as they could alter the aesthetic and physical characteristics of the product.

Genuine leather: Clean regularly with a soft, dry cloth. Any stains can be removed using a cloth moistened with water neutral soap by making regular circular movements. Gently dry after treatment. Gently dab from the edges to the center of the stain, do not rub. Strictly avoid the use of solvents, bleaches or other chemical detergents, as they could alter the aesthetic and physical characteristics of the product.

Wool: Use the vacuum cleaner with a smooth nozzle regularly, without brushing or rubbing in any way. Strictly avoid the use of solvents, bleaches or other chemical detergents, as they could alter the aesthetic and physical characteristics of the product.

Warnings: Some coverings (leather, imitation leather, textured fabrics) may have a slightly different aesthetic result depending on the batch, the dye bath and the type of product they are going to cover. In particular, the leather used for the upholstery of sofas and armchairs is a material of natural origin so any small imperfections are not to be considered defects. The leather upholstery, with use, can change its appearance and texture over time, this is to be considered normal.

UNPADDED SEATING MATERIALS

Maintenance instructions:

Mesh coverings: Use the vacuum cleaner with smooth nozzle regularly, without brushing or rubbing in any way. Any stains can be removed using a cloth moistened with water and neutral soap with regular circular movements. Strictly avoid the use of solvents, bleaches or other chemical detergents, as they could alter the aesthetic and physical characteristics of the product.

Exposed wood: Clean using a dry cotton cloth to remove any residual dust or minor impurities. Do not use wet or damp cloths. To avoid unsightly scratches, do not use abrasive cloths, chemicals or powdered cleaners that could damage the paint. Strictly avoid the use of solvents, bleaches or other chemical detergents, as they could alter the aesthetic and physical characteristics of the product. Wood surfaces, being a natural material itself, may undergo color changes with use and over time.

Plastic: Plastic surfaces should generally be cleaned with a soft, damp cloth soaked in water. We do not recommend the use of dry cloths which, with rubbing, could electrostatically charge the plastic surface, attracting dust.

For stubborn stains, mild liquid soap, diluted in water can be used in moderation. Strictly avoid

the use of solvents, bleaches or other chemical detergents, as they could alter the aesthetic and physical characteristics of the product. Avoid all abrasive substances such as powder detergents, abrasive pastes, steel wool or rough sponges. Avoid dragging objects on surfaces that can scratch the material.

CHROME OR PAINTED BASES AND METAL STRUCTURES

Maintenance and cleaning instructions: Both the metal surfaces in steel or aluminum and the painted surfaces must be cleaned with a soft, damp cloth soaked in hot water; for more stubborn stains, it is possible to dilute neutral liquid soap in water, in moderation. Always dry after cleaning with a soft cloth or chamois leather. Do not use creams and pastes suitable for cleaning steel ovens, do not use chlorine, do not use bleach and other aggressive detergents. It is not recommended to use abrasive pastes, scouring pads and abrasive sponges that can scratch metal surfaces. Avoid contact with floor cleaners containing corrosive solvents such as, for example, muriatic acid, ammonia, denatured alcohol, bleach, sulfuric acid, soda, etc.

CASTORS

Advice: For chairs placed on tiled floors, carpets or rugs, we recommend polyamide wheels.

For hard floors like stone, wood, laminate, the use of soft desmopan castors is recommended.

Maintenance and cleaning instructions: It is advisable to periodically clean the castors in order to avoid the accumulation of dirt that may be cause of malfunctioning.

Warning: Do not force the sliding of castors on floors with deep joints as the difference in level can cause them to break.